

HONDA REBEL 300/500 '17-/ S '20-

M O U N T I N G I N S T R U C T I O N S

REF 9462

CARENABRÍS NG TOURING / WINDSHIELD NEW GENERATION TOURING



ALLEN











Nº 3
Nº 6
Nº 8



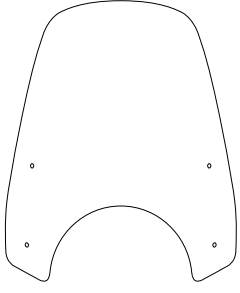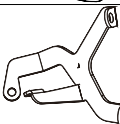ONLY FOR REBEL "S":

**BEFORE INSTALLING THE PUIG PRODUCT,
TAKE APART THE OEM SEMI-FAIRING**

**ANTES DE INSTALAR EL PRODUCTO PUIG,
DESMONTAR EL SEMI-FARO ORIGINAL**


ID	PIEZA/PART	DESCRIPCIÓN	DESCRIPTION	QTY	REF
1		Cúpula Touring	Touring screen	1	9462F/H/WM3
2		Soporte derecho (R)	Right support (R)	1	SOPOR2P6-R-9462
3		Soporte izquierdo (L)	Left support (L)	1	SOPOR2P6-L-9462
4		Tornillo Allen M8x45 ISO 7380	M8x45 ISO 7380 Allen screw	2	TORNI-I7380-817
5		Casquillo Ø8xØ14 x10	Ø8xØ14 x10 Arrowhead	2	CASQUI-----576
6		Silentblock M5	M5 silentblock	4	SILENBTM5-046/1
7		Arandela de nylon M5x1	M5x1 nylon washer	4	ARNV00000000245
8		Tornillo Allen M5x16 Ø11 ISO7380	M5x16 Ø11 ISO7380 Allen screw	4	TORNI-I7380-493
9		Tapón tornillo M5 ISO 7380	M5 ISO 7380 screw cap	4	TAPON-----85
10		Silentblock Ø12xØ6x9	Ø12xØ6x9 Silentblock	2	AROPASACABLES-1

HONDA REBEL 300/500 '17- / S '20-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

1

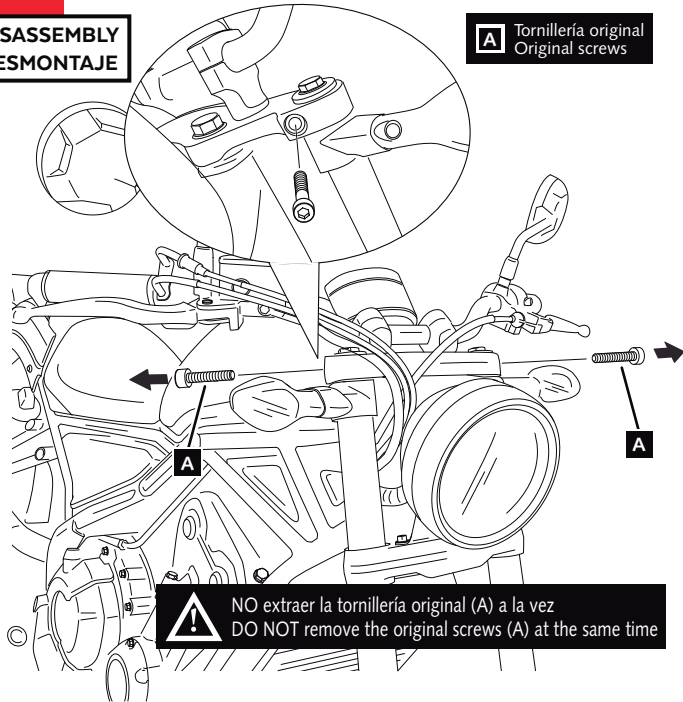**DISASSEMBLY
DESMONTAJE**




A Tornillería original
Original screws

! NO extraer la tornillería original (A) a la vez
DO NOT remove the original screws (A) at the same time

2

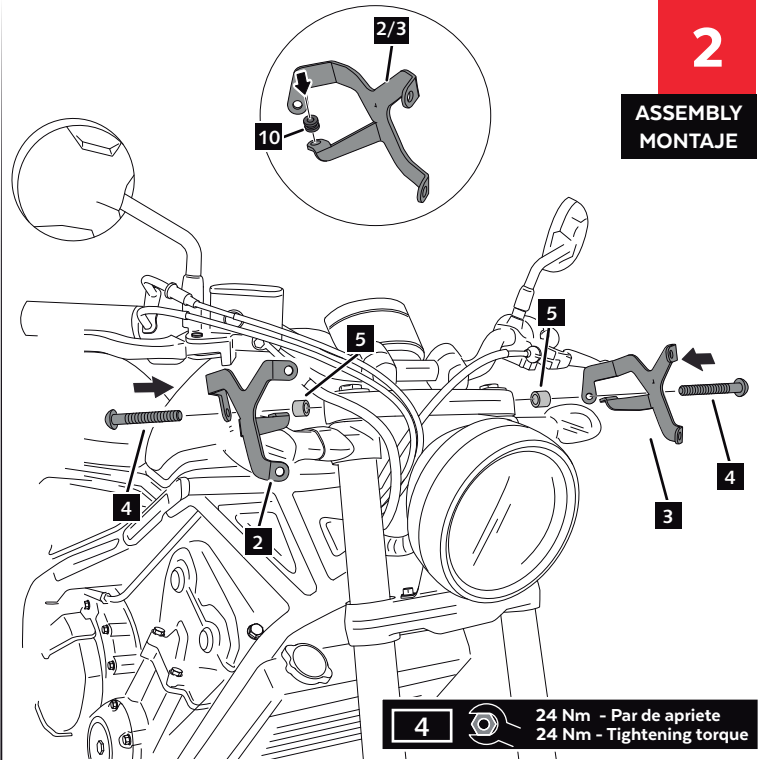
**ASSEMBLY
MONTAJE**



4 24 Nm - Par de apriete
24 Nm - Tightening torque

3

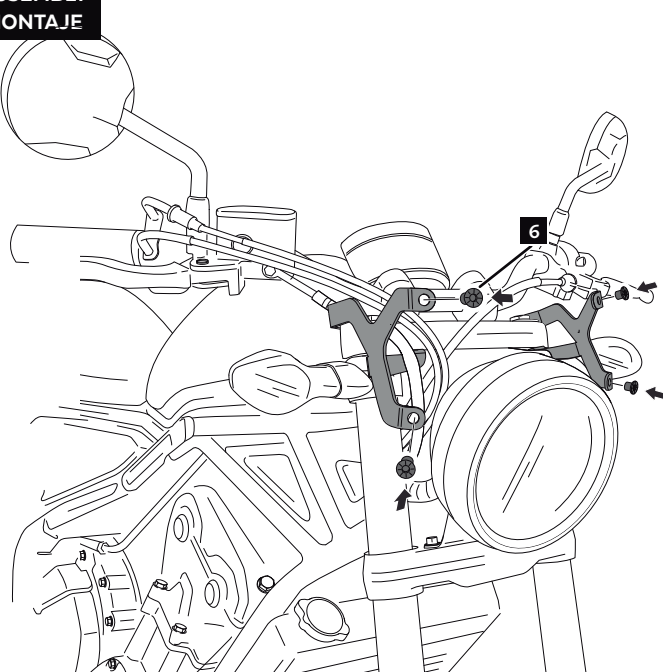
**ASSEMBLY
MONTAJE**



8 2,5Nm - Par de apriete
2,5 Nm - Tightening torque

4

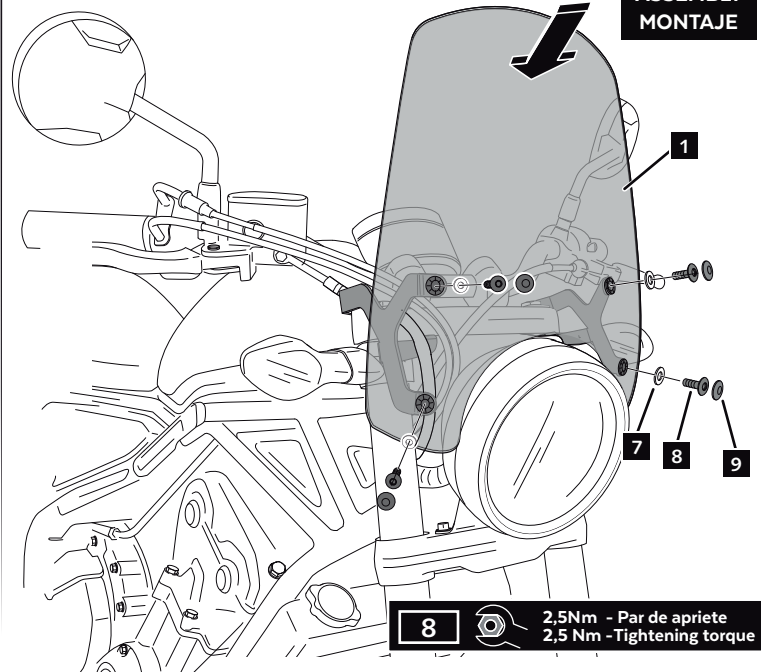**ASSEMBLY
MONTAJE**



8 2,5Nm - Par de apriete
2,5 Nm - Tightening torque